



1984 FIERO SERVICE MANUAL

The enclosed section is a complete revision for your 1984 Fiero Service Manual:

Section 8A - Electrical Troubleshooting

Discard the old section and replace with this section.



## INDEX


INDEX—Alphabetical Listing of Electrical Circuits  
For Component Locations, See Page 501.

	Page	Schematic Text	Page	Schematic Text	Page	Schematic Text
Air Conditioning .....	126	308	Ignition .....	107	Lights (continued)	
— Blower Control .....	126	308	Indicators .....	111	— Tail .....	119 306
— Compressor Control .....	126	308	Junction Block (C200) .....	139	— Trunk .....	121
Audio Alarm System .....	114	303	Junction Connector		— Turn .....	116 305
Body Connector (C201) .....	140		(C100) .....	138	— Underhood .....	121 307
Brake Warning System .....	113	303	Junction Connector		Oil Pressure Warning	
Charging System .....	106	301	(C500) .....	141	Indicator .....	112 302
Check Engine Light .....	107		Lights:		Power Distribution .....	104 301
Cigar Lighter .....	121	307	— Back Up .....	120	Power Door Locks .....	130 310
Clock .....	121	307	— Check Engine .....	107	Power Remote Mirrors .....	132 311
Coolant Fan .....	110	302	— Console .....	122	Power Windows .....	131 311
Coolant Temperature			— Courtesy .....	121	Radio .....	129 310
Gage .....	111	302	— Dome .....	121	Rear Window Defogger .....	125 308
Cruise Control .....	133	312	— Front Marker .....	116	Seatbelt Warning .....	112 303
Defogger .....	125	308	— Front Park .....	116	Starter .....	106 301
Electronic Fuel Injection ..	107		— Hazard .....	116	Tachometer .....	111 302
Engine Data Sensors .....	109		— Headlights .....	115	Torque Converter Clutch ..	109 301
Fuel Gage .....	111	302	— Instrument Panel .....	122	Trunk Release .....	135 313
Fuse Data .....	102		— Interior .....	121	Upshift Indicator .....	109
Gages .....	111	302	— License .....	119	Vehicle Data Sensors .....	108
Ground Distribution .....	136		— Reading .....	121	Wiper/Washer .....	123 307
Headlight Doors .....	118	305	— Rear Marker		Wiper/Washer (Pulse) .....	124 307
Heater .....	128	309	— Shift Indicator .....	122		
Horn .....	131	311	— Stop .....	116		
Idle Air Control .....	108					

## FUSE DATA

FUSE	COLOR (AMPS)	SCHEMATICS
C/H	YEL (20)	Coolant Fan Diesel Fuel Control
CRANK	TAN (3)	Electronic Fuel Injection
CTSY	YEL (20)	Audio Alarm System (Chime) Cigar Lighter Horns Interior Lights Power Door Locks Power Remote Mirrors Radio Digital Clock Trunk Light Lights: Turn/Stop
ECM/IGN	RED (10)	Electronic Fuel Injection
F PUMP	RED (10)	Electronic Fuel Injection
GAGES	RED (10)	Audio Alarm System (Chime) Brake Warning System Cruise Control Defogger Electronic Fuel Injection Instrument Panel Hood/Trunk/Door Ajar Trunk Release
HTR-A/C	YEL (20)	Air Conditioning Heater

FUSE	COLOR (AMPS)	SCHEMATICS
INST LPS	TAN (5)	Audio Alarm System (Chime) Defogger Lights: Instrument Panel Radio Digital Clock
PWR ACCY (CIRCUIT BREAKER)	(30)	Defogger Power Door Locks
RADIO	RED (10)	Cruise Control Radio Digital Clock
STOP/HAZ	YEL (20)	Audio Alarm System Lights: Stop/Hazard/Turn
TAIL	YEL (20)	Digital Clock Lights: Park/Front Marker Lights: Tail/Rear Marker/ License Radio Underhood Light
TURN-B/U	LT BLU (15)	Back Up Lights Lights: Turn
WDO (CIRCUIT BREAKER)	(30)	Power Windows
WIPER	YEL (20)	Wiper/Washer

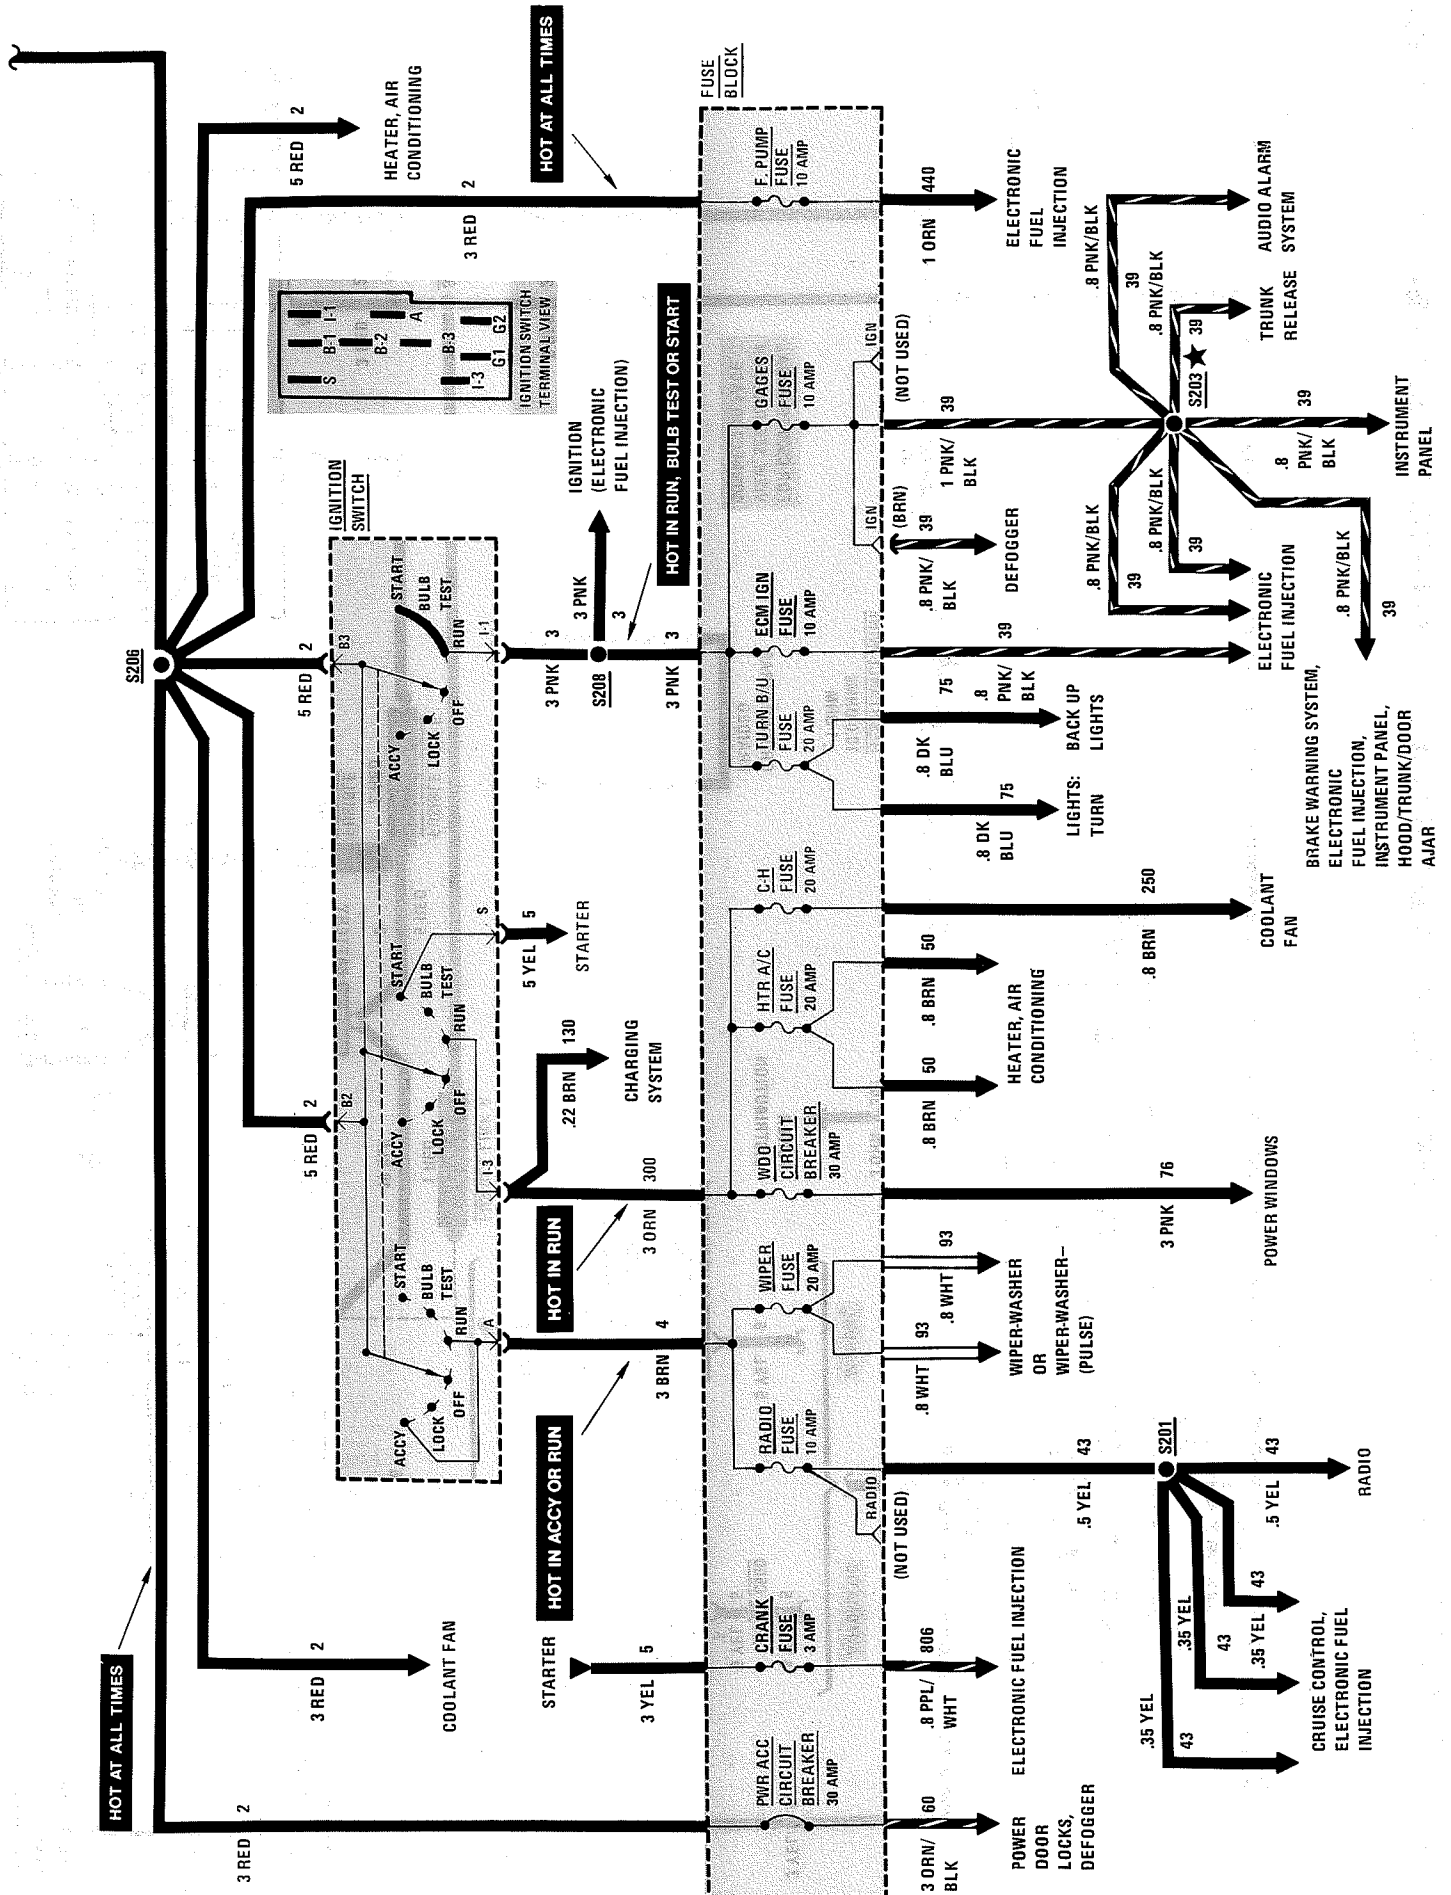



ENGINE DATA SENSORS, TORQUE CONVERTER CLUTCH, AND UPSHIFT INDICATOR

